


ECO-STAR ES-25 - ES-75

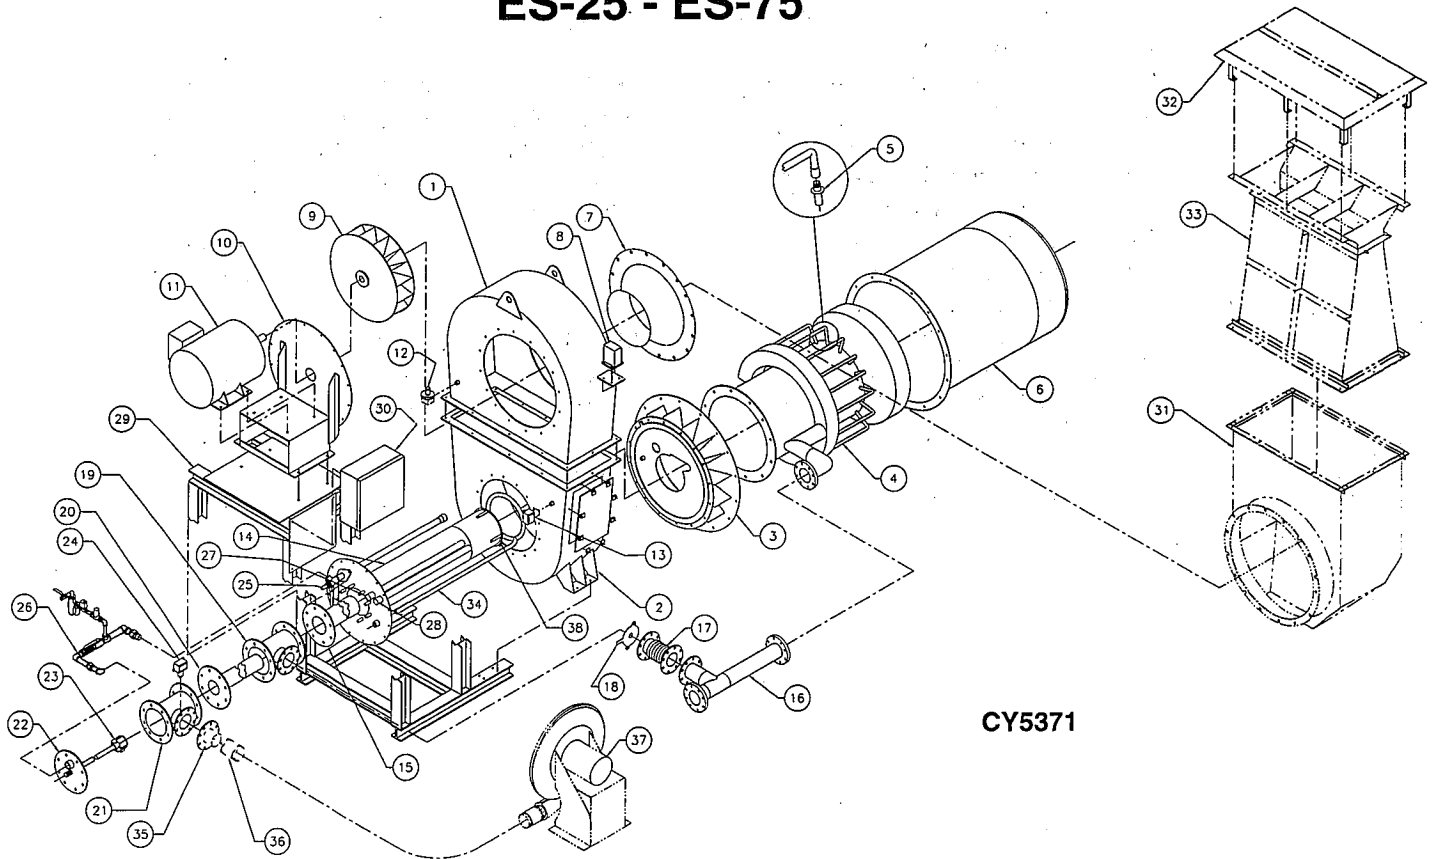


CY5371

Key

No.	Description	ES-25	ES-50	ES-75
1	Upper Housing Assembly	55994	56216	55565
2	Lower Housing Assembly	55979	56217	55564
3	Adjustable Spin Vane Assembly	56007	56235	55593
4	Flame Tube Assembly	59397	58768	58255
5	Gas Boost Nipple	59288	58757	70603x002
6	Cooling Air Jacket	59265	58735	58266
7	Inlet Damper Assembly (*Outlet)	56921	56945	56923
8	Damper Control Motor	16847	16847	20627
9	Impeller Assembly	56044	56276	71066
10	Fan Motor Mounting Assembly	56069	56273	55832
11	Fan Motor	20650	20654	20658
12	Combustion Air Pressure Switch	33251	33251	33251
13	Purge Air Pressure Switch	70344	70344	70344
14	Secondary Air Tube	59351	56244	55604
15	Primary Gas Tube Assembly	59407	56288	58205
16	Primary/Boost Gas Tee Assembly	59380	58771	58769
17	Flexible Nipple	800572	44658	44659
18	Primary Gas Orifice Plate	59764	58695	58251x002
19	Primary Gas Inlet Tee	56037	56253	55607
20	Primary Air Assembly	56027	58729	58201

Key No.	Description	ES-25	ES-50	ES-75
21	Air Inlet Tee	56043	56254	55607
22	Primary Air Insert	56083	56287	57735
23	Atomizer Assembly	59225	58774	47806
24	Primary Air Pressure Switch	70344	70344	70344
25	Pilot Assembly	59389	56294	55585
26	Pilot Gas Manifold Assembly	56065	57316	55700
27	Pilot Scanner	55586x005	55586x008	55586x003
28	Main Flame Scanner	55586x005	55586x008	55586x003
29	Skid Assembly (12 O'Clock)	56074	56289	55578
30	Burner Junction Box	59056x	59056x	59056x
31	Attenuator Transition	---	---	58428
32	Attenuator Rainhood	---	---	58034
33	Attenuator Venturi	---	---	---
34	LP Assembly	59408	58779	58335
35	Primary Air Inlet Adapter	70850	30068	30068
36	Flexible Sleeve W/Clamps	801801	801801	801801
37	Primary Air Blower	44044x	44044x	44092x
		TBA36-10	TBA36-10	TBA36-15
38	Deflector Ring	59786	58727	58617

ECO-STAR ES-100 - ES-150

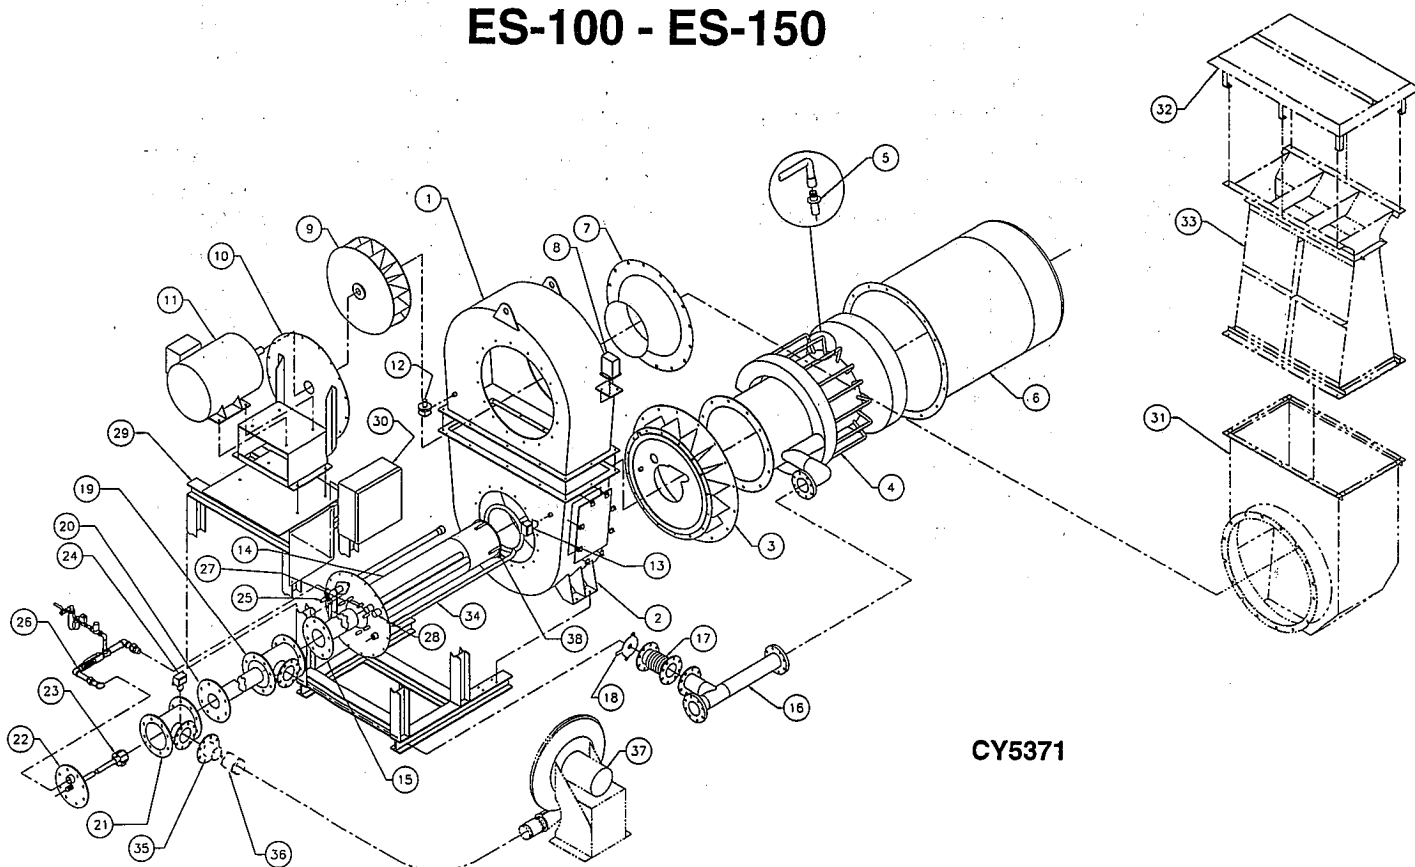

CY5371

Key

No.	Description	ES-100	ES-115	ES-150
1	Upper Housing Assembly	55565	55880	70497
2	Lower Housing Assembly	55564	55881	70501
3	Adjustable Spin Vane Assembly	55593	55851	70511
4	Flame Tube Assembly	58255	58212	70537x
5	Gas Boost Nipple	70603x002	70603x001	70603x003
6	Cooling Air Jacket	58266	58217	70538
7	Inlet Damper Assembly (* Outlet)	56924	56935	55906*
8	Damper Control Motor	20627	20627	20627
9	Impeller Assembly	71067	71068	59904
10	Fan Motor Mounting Assembly	55624	55974	70567
11	Fan Motor	20662	20666	20671
12	Combustion Air Pressure Switch	33251	33251	70344
13	Purge Air Pressure Switch	70344	70344	70344
14	Secondary Air Tube	55604	55852	70516
15	Primary Gas Tube Assembly	58205	58205	70526
16	Primary/Boost Gas Tee Assembly	58769	58770	70564x
17	Flexible Nipple	44659	44659	44660
18	Primary Gas Orifice Plate	58251x002	58251x001	70563x001
19	Primary Gas Inlet Tee	55607	55607	70530
20	Primary Air Assembly	58201	58201	70528

Key No.	Description	ES-100	ES115	ES-150
21	Air Inlet Tee	55607	55607	70530
22	Primary Air Insert	57735	57735	70535
23	Atomizer Assembly	47806	47806	53008
24	Primary Air Pressure Switch	70344	70344	70344
25	Pilot Assembly	55585	55585	70534
26	Pilot Gas Manifold Assembly	55700	55700	70533
27	Pilot Scanner	55586x003	55586x003	55586x007
28	Main Flame Scanner	55586x003	55586x003	55586x007
29	Skid Assembly (12 O'Clock)	55578	55848	70508
30	Burner Junction Box	59056x	59056x	59056x
31	Attenuator Transition	58428	58020	70579
32	Attenuator Rainhood	58034	58034	70584
33	Attenuator Venturi	59722	59722	70583
34	LP Assembly	58335	58335	70560
35	Primary Air Inlet Adapters	30068	30068	30407
36	Flexible Sleeve W/Clamps	801801	801801	801801
37	Primary Air Blower	44092x	44092x	44045x
		TBA36-15	TBA36-15	TBA36-20
38	Deflector Ring	58617	58617	70524